

To use your smartphone to control the Galaxy Seeker II Drone and view the in-flight Drone camera, first download the **Odyssey VR** app for iPhone, iPad or iPod Touch on the iTunes App Store or for Android devices on Google Play.




1. TURN ON THE DRONE

Use the power switch on the Galaxy Seeker II to power up the unit.


2. SETUP YOUR PHONE WIFI SETTINGS

On your smartphone, in "Settings," search for the WiFi signal "Odyssey WiFi" from your Drone. Click on it to establish a connection. This is the same for both iOS and Android devices.

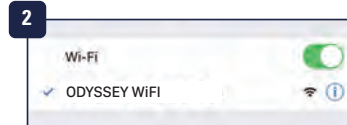

3. START UP THE APP

Open the ODYSSEY VR app on your smartphone and click to choose the Drone camera. Tap on "HD" for your Galaxy Seeker II's HD Video Camera.

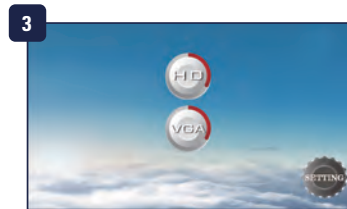

4. PAIR the APP to the DRONE

Pull up the left joystick on the screen and then pull it down to establish the connection, which is complete when the LED lights on the Drone stop blinking.




5. START YOUR ENGINES!


Click the onscreen HOVER START button to start the rotors/propellers. At the top of your screen, you can select from a number of options.

6. READY for the VR and ENTERING the 3rd DIMENSION!


Use the main screen (A) with the controls if you wish to use the app to control the Galaxy Seeker II Drone. If you wish to use the Remote Control and use the app as a live video stream, click the FULL button to enter the full-screen display (B). Or click the GLASSES button to enter the VR split-screen display, which requires the Odyssey VR 3D (Virtual Reality) headset (turn sheet over) to view the video feed in Odyssey Virtual 3D (C).

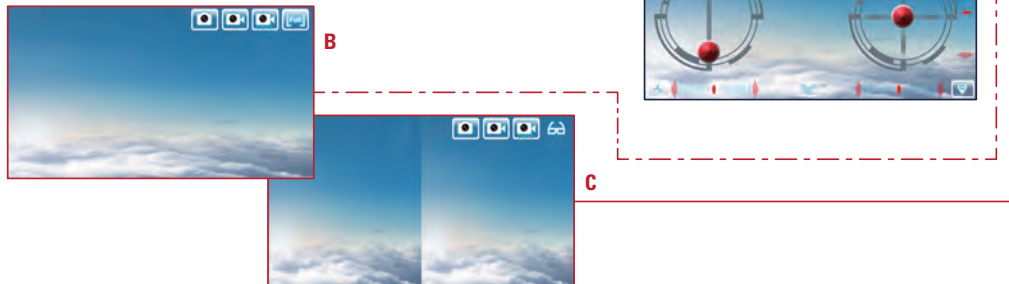

FUNCTIONAL SPECIFICATIONS

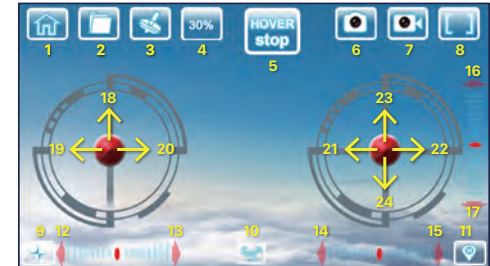


- | | |
|--------------------------------------|--------------------------------|
| 1. BACK | 10. 360° FLIP |
| 2. FILES (see below) | 11. AUTO-BACK FLY |
| 3. GRAVITY MOTION CONTROL | 12/13. TURNING LEFT/RIGHT TRIM |
| 4. SPEED SETTINGS (30% / 60% / 100%) | 14/15. LEFT/RIGHT SIDE TRIM |
| 5. HOVER START / STOP | 16/17. FORWARD/BACKWARD TRIM |
| 6. TAKE PICTURE | 18. ASCEND / DESCEND |
| 7. TAKE VIDEO | 19/20. TURN LEFT/RIGHT |
| 8. IMAGE MODE INTERFACE | 21/22. LEFT/RIGHT |
| 9. HEADLESS MODE | 23/24. FORWARD/BACKWARD |

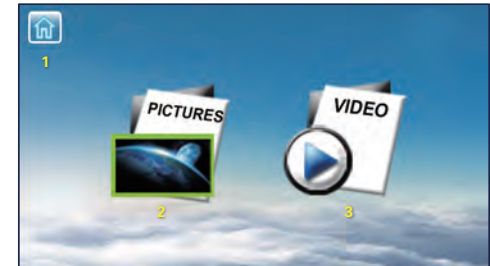

1. BACK/HOME 2. PHOTO IMAGES 3. VIDEO RECORDINGS



Rubber pad

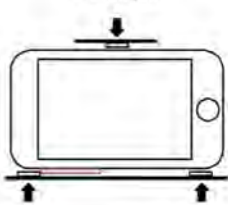

1. INSTALL YOUR SMARTPHONE INTO THE VR 3D HEADSET

From the left side of the headset, pull to slide out the front panel to expose the smartphone holder in the VR 3D headset.


Push the plastic and rubber clamp up, place your smartphone in, and gently release clamp to hold your phone in place.

NOTE: The size of the smartphone should not exceed 6.4" (163 mm) x 3.25" (83 mm). Do not charge your smartphone while it is within the Odyssey VR 3D Headset.


2. START YOUR APP and ADJUST YOUR HEADSET

Start the Odyssey VR app on your smartphone, select the VR Split-Screen Display option, and slide the smartphone back into the headset.

You can adjust the lenses to clarify the view by using the two adjusters on the top of the VR 3D Headset.

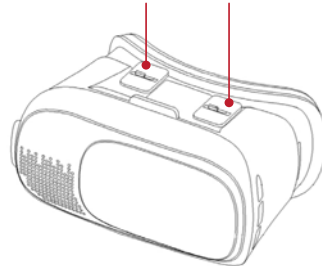

For the best performance, adjust the goggles so that the center of your eyes align with the glass centers on the goggles. Adjust the goggle head straps for the best fit.

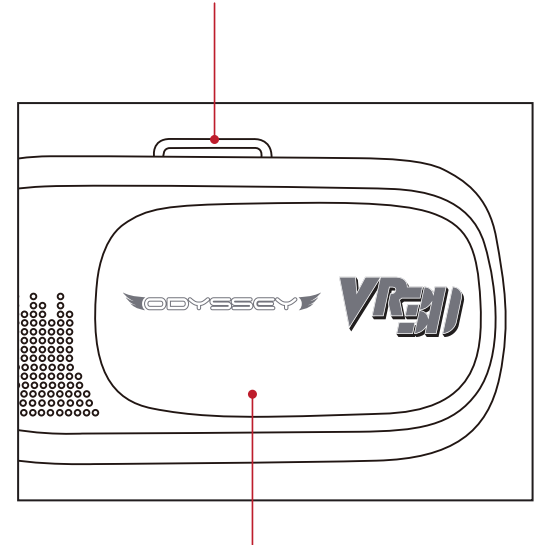

For other apps and games that require use of your smartphone's camera, you can remove the front panel.

CAUTION

1. If you experience dizziness or nausea, stop using the app and Odyssey VR 3D headset immediately.
2. Those with claustrophobia or fear of heights should take care using the app and headset. Discontinue use if you feel any discomfort.

Your Odyssey VR 3D Headset is also compatible with other amazing Virtual Reality experiences. Download other VR apps and games on both the App Store and Google Play.