


# Odyssey **UPSHOT**

driving imagination



**PARTS OF THE BOW**

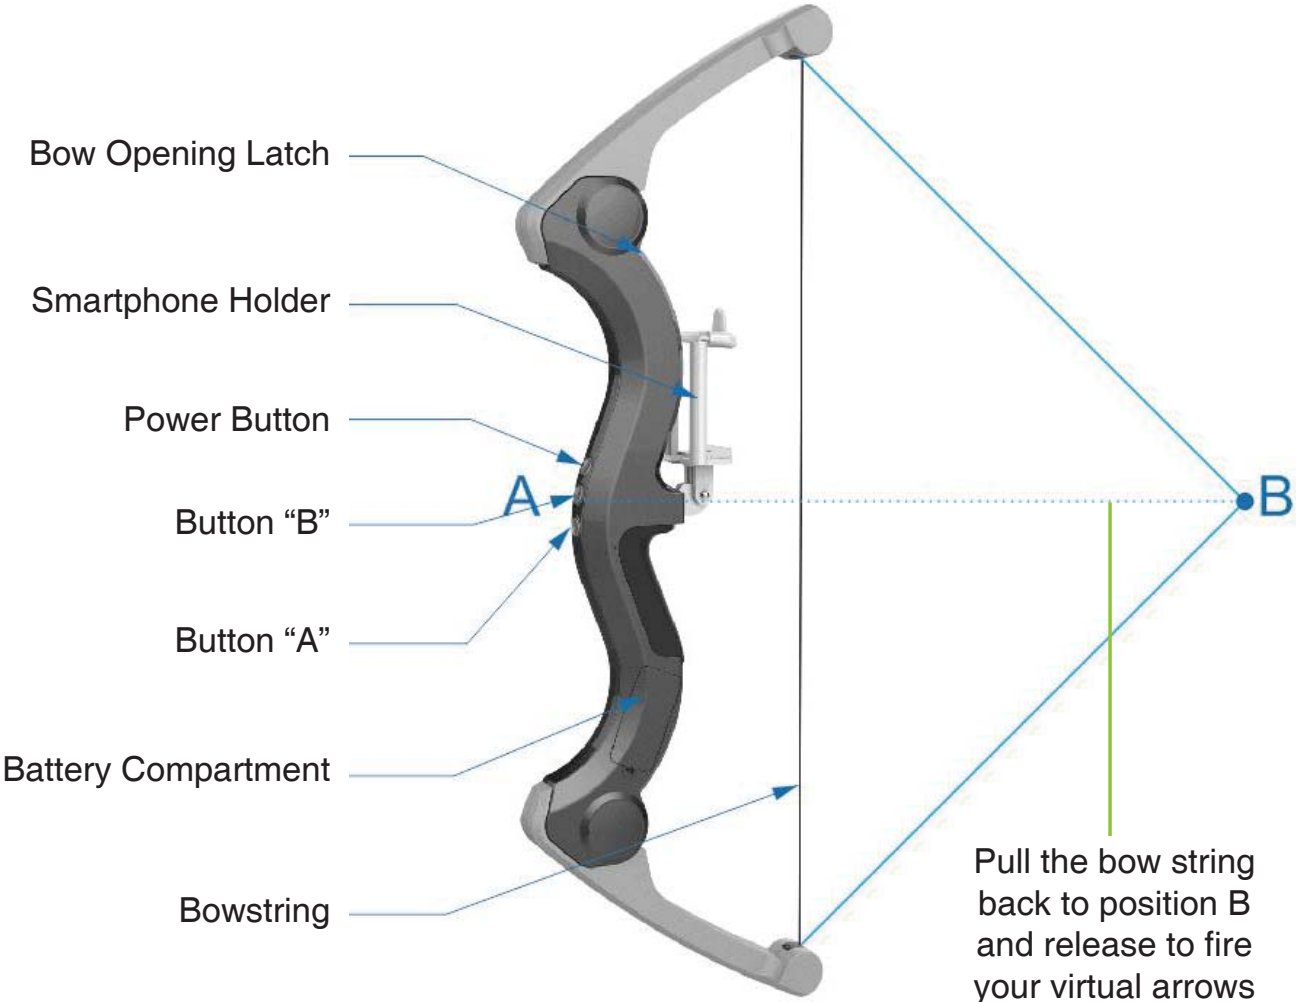

## **INSTALLING THE BOW BATTERIES**

1. Using a Phillips screwdriver, unscrew the battery cover screw and open.
2. Install 2x new AAA batteries taking care to match the correct polarity (+/-).
3. Close the cover and tighten the battery cover screw.



## **DOWNLOAD THE APPS**

UpShot is compatible with two APPs. To download either app scan a QR code below. Apple and Android users can also search for “UPSHOT: DRAGONS” or UPSHOT: ARCHERY” in the App Store and Google Play.



QR Code for the “UPSHOT: DRAGONS” App

QR Code for the “UPSHOT: ARCHERY” App

### **BLUETOOTH CONNECTION**


1. Make sure your bluetooth is on, but you don't need to connect to the bow - the APP will automatically search and connect to your Bow.
2. Press the power button on the bow and then open either APP on your smartphone.
3. When you are finished playing long press the power button for 5 seconds to turn the bow off.

# PLAYING "UPSHOT: DRAGONS"

UPSHOT: DRAGONS is a fantasy style AR archery game. Protect your castle from invading dragons, before the dragons destroy the castle!

## UPSHOT: DRAGON'S HOME SCREEN

Quit game

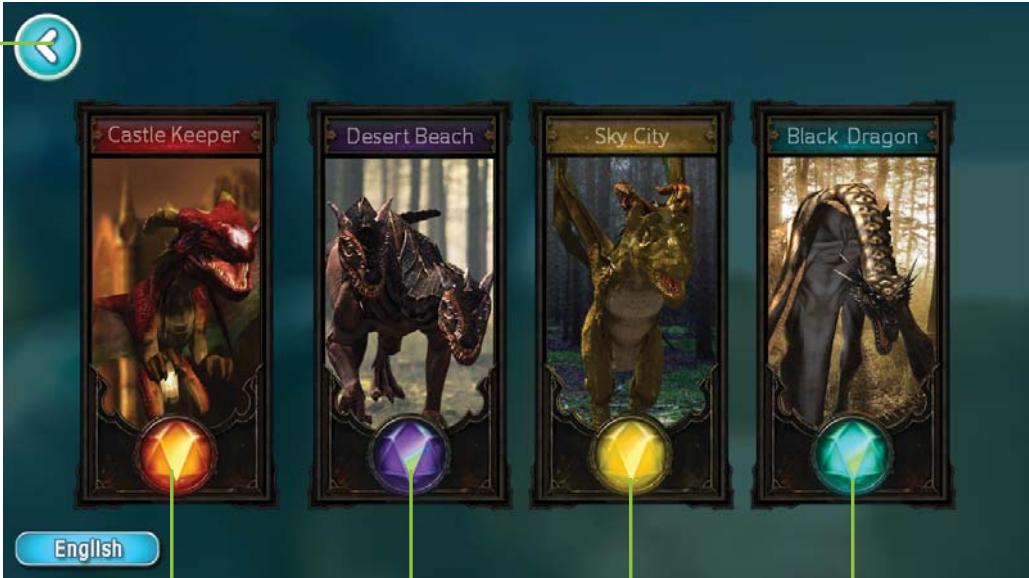

Select one of three castle worlds to defend from the dragons!

Play hunting missions with changing objectives!

## LEVEL SELECTION SCREEN

Exit to Home Screen



Select any one of the multiple difficulty levels.

## GAMEPLAY SCREEN

★ Tip. Make sure to move your smartphone and bow up, down and around all 360° to find all the dragons!



★ Tip. Use Button "A" on your bow to zoom in on your target.

Touch to select one of four skills.

★ Tip. Use Button "B" on your bow to quickly cycle between skills.

## PLAYING "UPSHOT: ARCHERY"

UPSHOT: ARCHERY contains 3 different games that you can play with computer generated graphics, or in full augmented reality mode using your smartphones back camera.

### UPSHOT:ARCHERY'S HOME SCREEN



Select one of the three games and play in augmented reality.

Select one of the three games and play with computer graphics.



Scroll to the right to play the same three games with computer generated landscapes.

## PLAYING TARGET PRACTICE

Practice your archery skills!



- ★ Tip. Pull back on the bow string to show your bow's aim.
- ★ Tip. Use Button "A" on your bow to zoom in on your target.

## PLAYING DUCK HUNTING

Go on a virtual duck hunt!

★ Tip. Make sure to move your smartphone and bow up, down and around all 360° to find all the ducks!



- ★ Tip. Pull back on the bow string to show your bow's aim.
- ★ Tip. Use Button "A" on your bow to zoom in on your target.

## PLAYING ZOMBIE WAR

Protect your base from the invaders!

★ Tip. Make sure to move your smartphone and bow up, down and around all 360° to find all the invaders!



★ Tip. Pull back on the bow string to show your bow's aim.

★ Tip. Use Button "A" on your bow to zoom in on your target.

## ★ TIP. LEVEL SELECTION

All the games have 8 difficulty levels. Keep completing the objectives to advance to the next level.





For Customer Service please email:  
Care@OdysseyToys.com

Please note the units model number and name in your email:  
Model no. ODY-420 • UpShot

www.OdysseyToys.com

## CAUTIONS & WARNINGS

- Suitable for ages 8 and up. Adult supervision is always recommended.
- This product contains small parts which are a choking hazard. Keep away from small children.
- Manufacturers and dealers disclaim all responsibility for damage caused by misuse.
- Keep hair and loose clothing away from the UpShot when in use.
- If the UpShot will be stored and unused for an extended period of time, please remove the batteries.
- Check the batteries regularly for potential leakage or corrosion that may occur.
- When installing the batteries carefully follow the polarity marking +/-.
- Do not mix different battery types.
- Remove exhausted or drained batteries

## CARE & MAINTENANCE

- Do not submerge the unit in any liquids.
- Keep the unit dry.
- Do not place the unit near powerful, un-shielded magnets.
- Do not expose the unit to extreme hot or cold temperatures.
- Do not hit, drop, or smash the unit with extreme force.
- Do not disassemble the unit for any reason.

NOT FOLLOWING THESE PRECAUTIONS WILL VOID YOUR WARRANTY.

MADE IN CHINA

